


T-Wedge Instructions Dimensions


STEP 1

Clip wedges to fit desired angle.

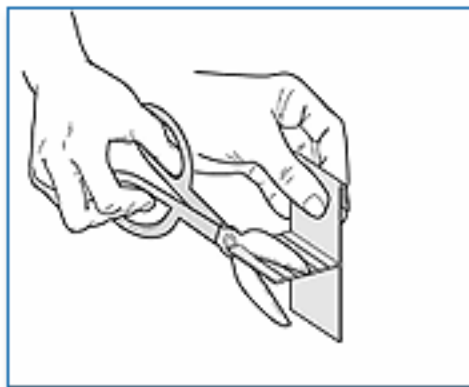


STEP 2

Squeeze hook portion of wedge to create snug fit.

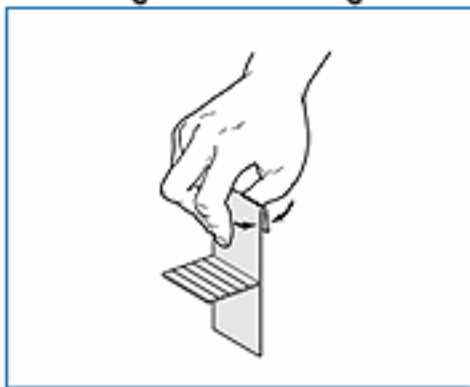


STEP 3


To attach, push wedge down firmly onto back of gutter every 3'.

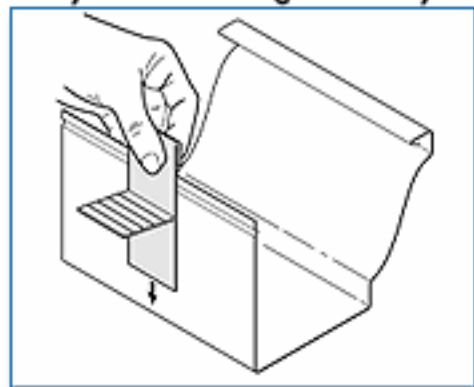


#4400

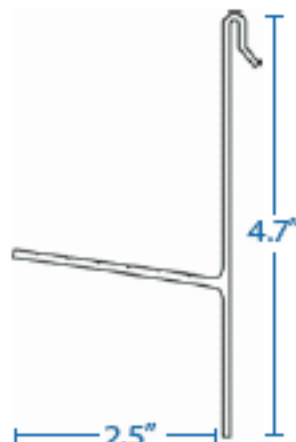


#4500

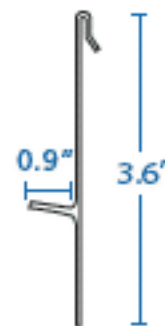

#4600

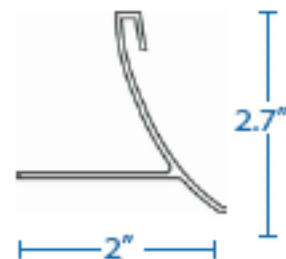

#4900

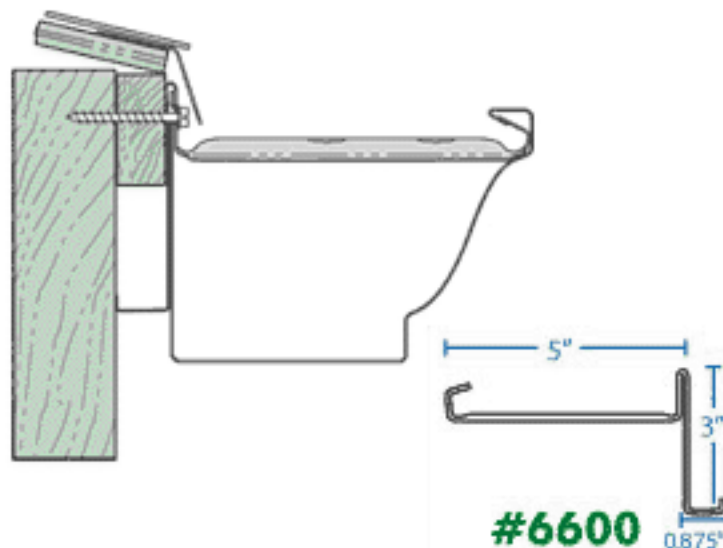

#6600

0.875"